



INSTALLATION INSTRUCTIONS FOR PART 95-7321

APPLICATIONS

Hyundai Accent 2006-2010
Kia Rio / RIO 5 2006-2010
Kia Sportage 2005-2010

95-7321




KIT FEATURES


- DDIN Head Unit Provision
- ISO Stacked Head Unit Provision

KIT COMPONENTS

A) DDIN Brackets B) DDIN Trim Plate

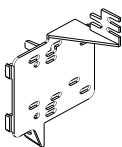

A



B

WIRING AND ANTENNA CONNECTIONS (Sold Separately)

HARNESS:




- 70-7303 - Hyundai / Kia Harness 2009
- 70-1004 - Hyundai 2006-up/KIA harness 2004-up

ANTENNA ADAPTER:

- 40-K11 - KIA antenna adapter 2007-up
- 40-K10 - KIA antenna adapter 2007-up

TOOLS REQUIRED:

Phillips Screwdriver • Small Flat Blade Screwdriver • Panel Removal Tool • Cutting Tool



METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2010 METRA ELECTRONICS CORPORATION




95-7321

TABLE OF CONTENTS

Dash Disassembly 1-2

Kit Preparation 3

Kit Assembly 4

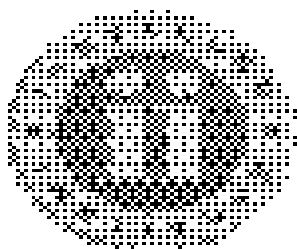

KNOWLEDGE IS POWER



Maximize your installation and satisfaction levels by enrolling in the most recognized and respected mobile electronics national training technology. Log onto www.metradirectmetra.com or call 800-889-6767 for more information and save steps toward a better tomorrow.



Metra recommends MECP certified technicians



HYUNDAI ACCENT 2006-2010
KIA RIO / RIO 5 2006-2010

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the trim panel surrounding the radio and including the a/c vents. (Figure A)
- 3** Remove (4) Phillips screws securing the radio. (Figure B)

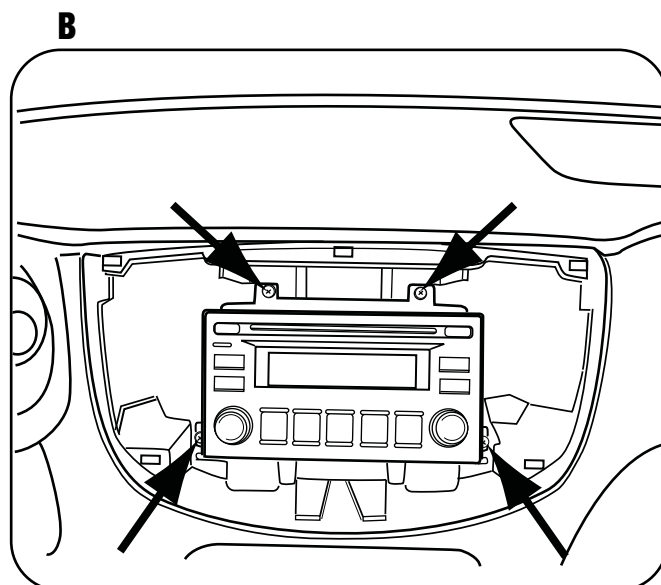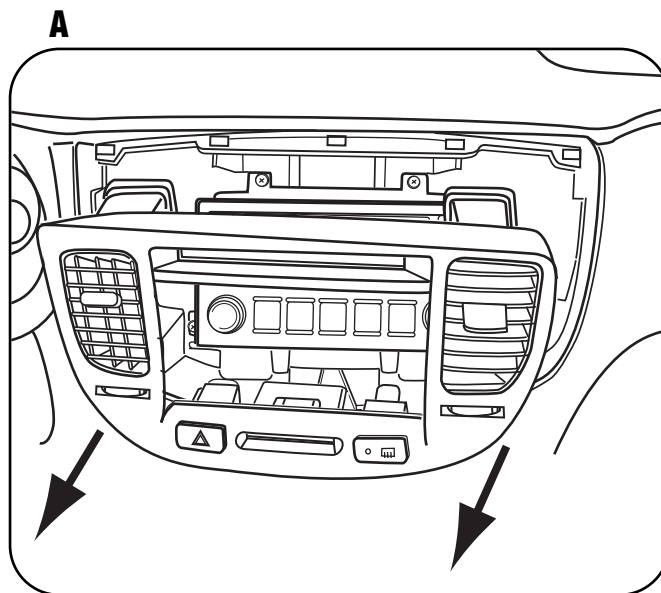


KIA SPORTAGE 2005-2010

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove the entire panel surrounding the radio and including the A/C controls. **Note: Start at bottom of panel.** (Figure A)
- 3 Remove (4) Phillips screws to extract radio from dash. (Figure B)

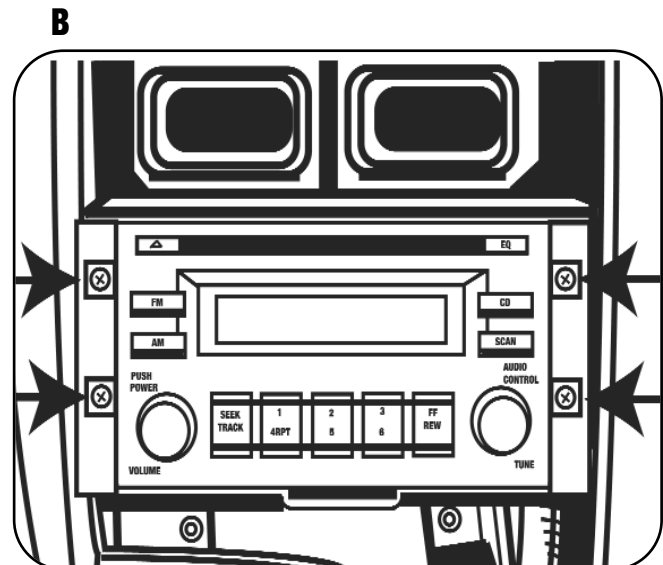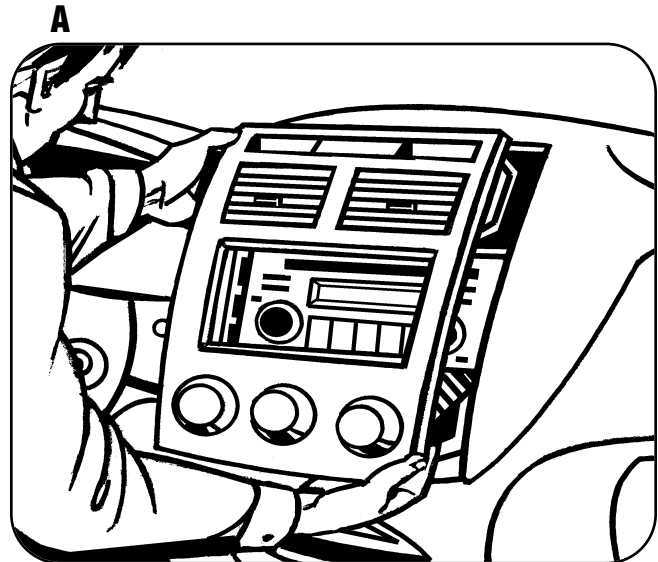


- 1 HYUNDAI ACCENT: Cut and remove shaded areas. (Figure A)

A

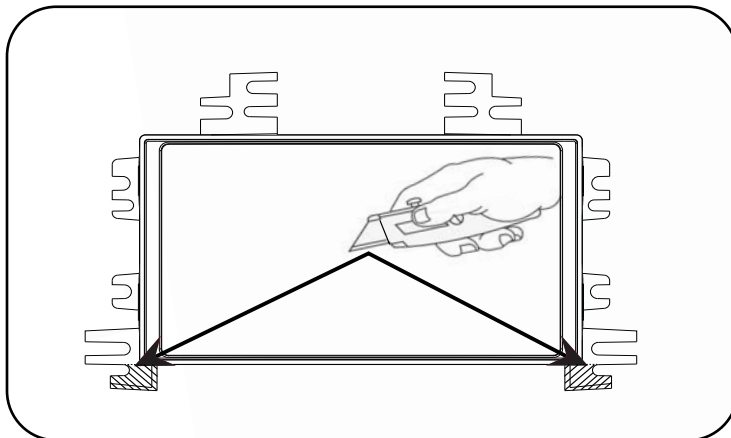


- 2 KIA RIO: Cut and remove shaded areas. (Figure B)

B

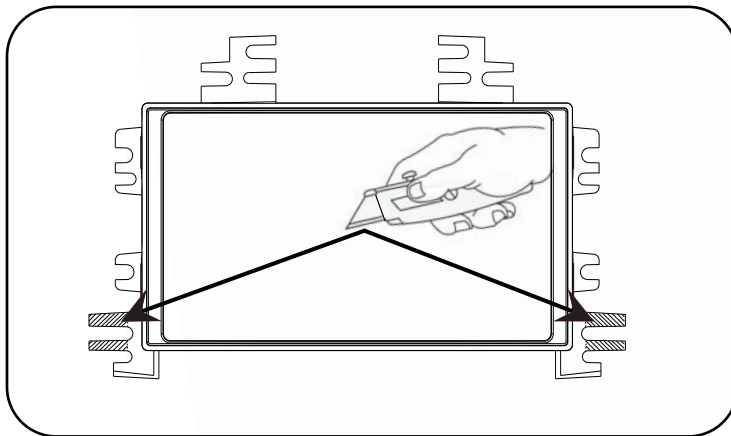



- 3 KIA SPORTAGE: Cut and remove shaded areas. (Figure C)

B

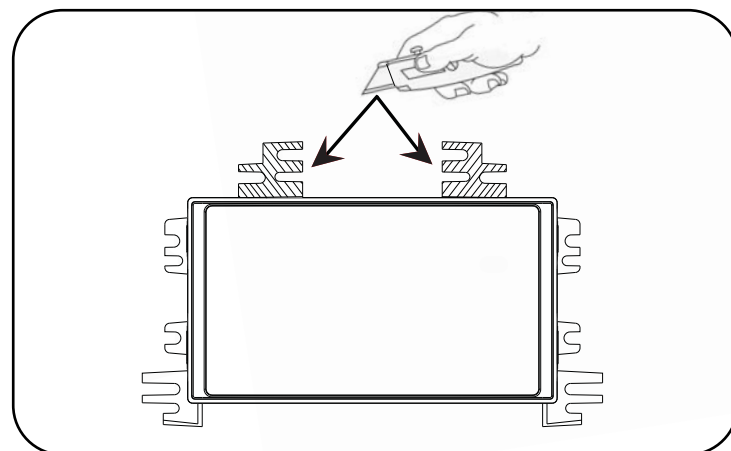

DOUBLE DIN / STACKED ISO DIN **HEAD UNIT PROVISION**

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Re-connect the negative battery terminal and test the unit for proper operation.
- 2** Attach the Double DIN brackets to the inside edge of the Double DIN trim plate. (Figure A)
- 3** Slide the Double DIN head unit or stacked ISO head units into the bracket/radio housing assembly and secure the Double DIN head unit or stacked ISO head units to the assembly using the screws supplied with the radio. (Figure B)
- 4** Reassemble dash in reverse order of disassembly.

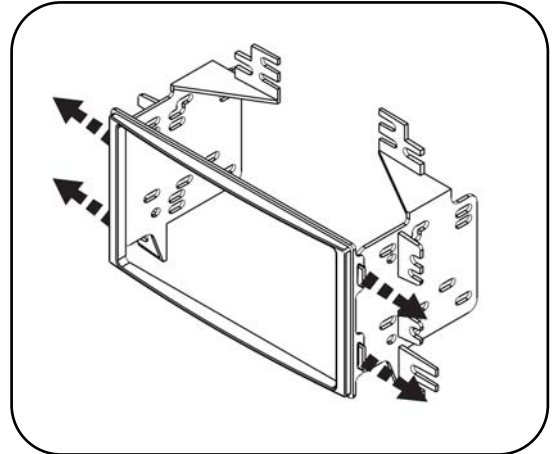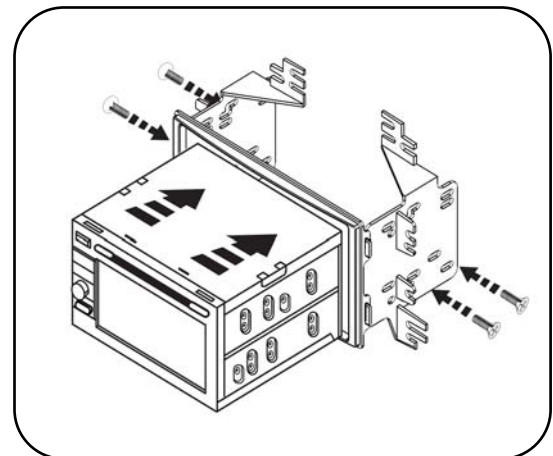A**B**



95-7321

NOTES

This image shows a full page of blank, lined paper. It features approximately 28 evenly spaced horizontal black lines across its entire width, providing a template for writing or drawing. The margins are consistent on all sides.

95-7321 INSTRUCTIONS

METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



www.metraonline.com

REV. 04/26/10

© COPYRIGHT 2010 METRA ELECTRONICS CORPORATION

INST95-7321